

## TROUBLESHOOTING: CRX DRIVE RECORDER LEDS\*

Vestige View has four LED lights labeled:  
POWER, REC, ALARM, and LAN.

### Rec LED is off:

The SSD is not inserted in to the CRX.



### Alarm LED is blinking:

This indicates that one of the connected cameras is not receiving view signal.  
Please check the camera's connection.

### Alarm LED is solid:

There may be a problem with the camera connection or data storage device,  
please contact Vestige Support.

### LAN LED is blinking or off:

- The SIM card is not registered with the cellular network. Please verify the SIM is inserted correctly.
- If it looks to be inserted correctly, remove and re-insert the SIM card and try again.
- Power cycle the camera.

### LED Specifications:

- POWER- Green LED: Solid ON when CRX is powered.
- REC- Orange LED: Solid ON when recording.
- ALARM- Red LED: Solid ON when there are any failures such as missing camera input, bad SSD, etc.
- LAN- Orange LED: Solid ON when connected to network and flashing when there is a network or server error.

If you have any further questions,  
please contact support:

704-321-4960, Ext. 2

Email: [support@vestigegps.com](mailto:support@vestigegps.com)

[vestigegps.com/customersupport](http://vestigegps.com/customersupport)