

## TROUBLESHOOTING: VESTIGE VIEW LEDS\*

Vestige View has three LED lights:  
solid red, solid green, and blue.



### Red LED is solid:

The solid red LED indicates that one of the connected cameras is not receiving view signal. Please check the camera's connection or contact Vestige Support.

### Red LED is blinking:

There is an SD card error/corruption. Replace the SD card or contact Vestige Support.

### Green LED is blinking or off:

The SIM card is not registered with the cellular network. Please verify the SIM is inserted correctly or contact Vestige Support.

### Blue LED is blinking slowly:

The camera is not recording.

### Blue LED is solid:




The camera is currently recording.



If you have any further questions,  
please contact support:  
704-321-4960, Ext. 2  
Email: [support@vestigegps.com](mailto:support@vestigegps.com)  
[vestigegps.com/customersupport](http://vestigegps.com/customersupport)

\* Troubleshooting rules in this document do not apply to the CRX drive recorder.

## LED TROUBLESHOOTING CHEAT SHEET:

Status/Step		LED			Buzzer	Voice [Remark] To hear the Voice, please audio output cable to speaker.		
		Warning	Record	Network				
		(Red)	(Blue)	(Green)				
								
Start-up	Bootting step1 (0~20)		On	Off	Off			
	Bootting step2 (20~30)		On	On and Off	Off			
	Bootting Finished (30, 1second)		On	On	On	[Beep] (1000Hz, 200msec)	「Beep」(1time)	
	Power off	During Power off		Off	Simultaneous Flashing(Blink rate: fast)			
		Power off finished		Off	Off	Off	[Beep] [Beep] (500Hz, 150msec)	
Record	Continuous Record	Recording		On				
	Event record	Stand by		On				
		Recording		Flashing(Blink rate: fast)				
	Dual record	Continuous recording		On				
		Event recording		Flashing(Blink rate: fast)				
	No record	Not record		Off				
Network	3G Network Device Ready				On			
	Communication				On			
Function	SD Initialize (Format)		Off	On and Off	Off and On		(Beep, 1time) continuously	
	G-Sensor Calibration						「Beep→( after 2 seconds) Beep、 Beep」	
	FW Upgrade			On and On and Off and Off	Off and Off and On and On			
	Button Press					[Beep] (2000Hz, 200msec)	「Beep」	
Warning	System Warning	SD Card Full	Flashing(Blink rate: fast)	Off			「Beep x 4」(3times)	
		Video loss Video STD error	On					
Error	Record Error	SD error, No SD, Write fail	Flashing(Blink rate: Slow)	Off			「Beep x4」(3times)	
	Network Error	3G Network Device error SIM error			Off			
		Data Network connection error				Flashing(Blink rate: Slow)		
		DMS communication error				Flashing(Blink rate: Slow)		
Event Trigger	G-Sensor, Panic Button, Alarm-In						「dingdong x2」(1time)	
	Over Speed						「beep, beep x2」(1time)	